

Installation Manual



Encore Partyline

A guide to installation
and use for Encore
Partyline Systems

Part Number: 399G134 Rev B

Date: 24 May 2018

Document Reference

Document title

Part Number: 399G134 Rev B

Legal Disclaimers

Copyright © 2018 HME Clear-Com Ltd.

All rights reserved.

Clear-Com and the Clear-Com logo are trademarks or registered trademarks of HM Electronics, Inc.

The software described in this document is furnished under a license agreement and may be used only in accordance with the terms of the agreement.

The product described in this document is distributed under licenses restricting its use, copying, distribution, and decompilation / reverse engineering. No part of this document may be reproduced in any form by any means without prior written authorization of Clear-Com, an HME Company.

Clear-Com Offices are located in California, USA; Cambridge, UK; Dubai, UAE; Montreal, Canada; and Beijing, China. Specific addresses and contact information can be found on Clear-Com's corporate website:

www.clearcom.com

Clear-Com Contacts

Americas and Asia-Pacific Headquarters

California, United States

Tel: +1.510.337.6600

Email: CustomerServicesUS@clearcom.com

Europe, Middle East, and Africa Headquarters

Cambridge, United Kingdom

Tel: +44 1223 815000

Email: CustomerServicesEMEA@clearcom.com

Canada Office

Quebec, Canada

Tel: +1 (450) 653-9669

China Office

Beijing Representative Office

Beijing, P.R.China

Tel: +8610 65811360/65815577

Please read and follow these instructions before operating this product.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produces heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades, with one blade wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

Please familiarize yourself with the safety symbols in Figure 1. When you see these symbols on this product, they warn you of the potential danger of electric shock if the speaker station is used improperly. They also refer you to important operating and maintenance instructions in the manual.

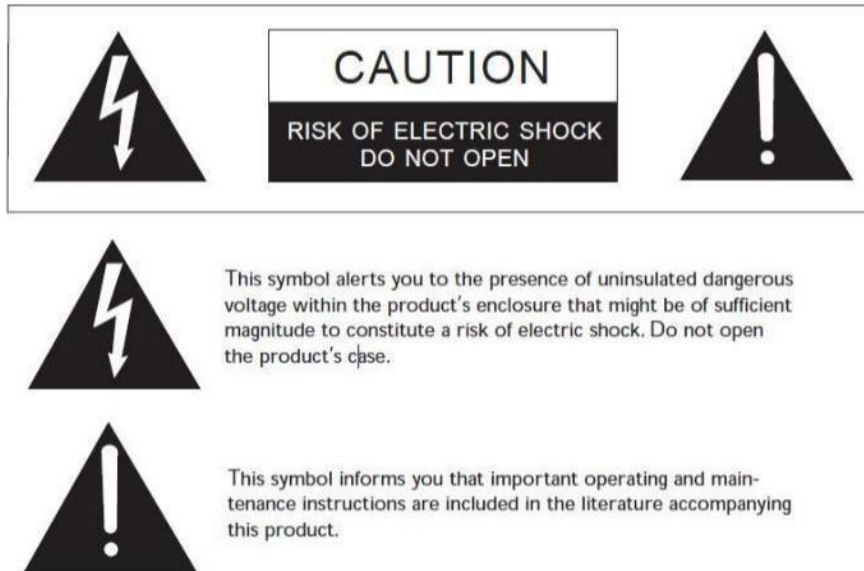


Figure 1: Safety Symbols

Waste Electrical and Electronic Equipment (WEEE)

The European Union (EU) WEEE Directive (2012/19/EU) places an obligation on producers (manufacturers, distributors and/or retailers) to take-back electronic products at the end of their useful life. The WEEE Directive covers most Clear-Com products being sold into the EU as of August 13, 2005. Manufacturers, distributors and retailers are obliged to finance the costs of recovery from municipal collection points, reuse, and recycling of specified percentages per the WEEE requirements.

Instructions for Disposal of WEEE by Users in the European Union

The symbol shown below is on the product or on its packaging which indicates that this product was put on the market after August 13, 2005 and must not be disposed of with other waste. Instead, it is the user's responsibility to dispose of the user's waste equipment by handing it over to a designated collection point for the recycling of WEEE. The separate collection and recycling of waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local authority, your household waste disposal service or the seller from whom you purchased the product.



CONTENTS

1	Introduction	8
1.1	<i>The Clear-Com Concept.....</i>	8
1.2	<i>Power Distribution and Short Circuit Protection</i>	9
2	Installing an Intercom System	12
2.1	<i>Single-Channel System</i>	12
2.2	<i>Multi-Channel System</i>	13
2.2.1	<i>Crosstalk Considerations in a Multi-Channel System</i>	14
2.3	<i>Intercom Cable Considerations</i>	16
2.4	<i>Installing the Stations</i>	19
2.5	<i>Connections.....</i>	19
2.5.1	<i>Intercom Line Connection:</i>	19
2.5.2	<i>Line Termination:</i>	20
2.5.3	<i>Headset Connector:</i>	20
2.5.4	<i>Panel Mic Connector:</i>	21
2.5.5	<i>Hot Mic Out / IFB System:</i>	21
2.5.6	<i>Stage Announce Output:</i>	22
2.5.7	<i>Relay Out:.....</i>	22
2.5.8	<i>Program Input:</i>	22
2.5.9	<i>External Speaker:.....</i>	23
2.5.10	<i>Auxiliary Connector:</i>	23
2.5.11	<i>AC Power Connection:</i>	23
3	Configuring Clear-Com Products to Work Together	24
3.1	<i>TW-47 Two-Way Radio Interface.....</i>	24
3.2	<i>KB-701 Speaker Station</i>	24
3.3	<i>RM-702 Remote Station</i>	25
4	System Checkout.....	27
4.1	<i>Check Termination.....</i>	27
4.2	<i>Check Intercom Cable Resistance</i>	27
4.3	<i>Final Tests.....</i>	28
5	Troubleshooting	29
5.1	<i>System does not operate.....</i>	29
5.2	<i>Red SHORT LED illuminated</i>	29
5.3	<i>Both red SHORT LEDs are illuminated.....</i>	29
5.4	<i>Hum or buzz in system.....</i>	30

5.5 System feedback (Acoustical)..... 30

5.6 Excessive crosstalk 31

5.7 Program signal sounds distorted. 31

5.8 Call signals do not function. 31

5.9 Call Signals do not turn off..... 31

6 Typical Applications..... 32

6.1 Cable or School Television Studio..... 32

6.2 Theatre 1 34

6.3 Theatre 2 36

6.4 Theatre 3 38

6.5 ENG/EFP Truck..... 40

7 Program Audio to Announce Output Option 41

7.1 Theatre Application..... 41

7.2 Setting the Option 43

7.3 System Setup 44

**8 Appendix 1: Partyline Products (to assist in upgrading existing systems)
45**

9 Glossary 48

10 Technical Support and Repair Policy 51

10.1 Technical Support Policy 51

10.2 Return Material Authorization Policy 53

10.3 Repair Policy 54

11 Compliance..... 56

Acknowledgement 60

1 Introduction

Congratulations on choosing Clear-Com products. Clear-Com was established in 1968 and remains the market leader in providing intercom for entertainment, educational, broadcast and industrial applications. The ruggedness and high build-quality of Clear-Com products is the industry standard. In fact, many of our original beltpacks and Main Stations are still in daily use around the world.

We recommend that you read through this manual completely to better understand how to install your intercom system. Please pay particular attention to the section on system wiring, as improper wiring detracts from the performance of the system or causes system failure. If you encounter a situation or have a question that this manual does not address, contact your dealer or call Clear-Com direct at the factory. Our applications support and service people are standing by to assist you. Thank you for selecting Clear-Com for your communications needs.

1.1 The Clear-Com Concept

Clear-Com is a closed-circuit intercom system that consistently provides high-clarity communication in both high-noise and low-noise environments. A basic system consists of a single- or multi-channel Power Supply or Main Station connected to various single- or multi-channel Remote Stations, such as beltpacks and loudspeaker stations.

Clear-Com is a distributed amplifier system; each Main or Remote Station houses its own microphone preamplifier, headset or speaker power amplifier, and signaling circuitry. Stations bridge the intercom line at a very high impedance and place a minimum load on the line. The audio level always remains constant, and does not fluctuate as stations leave and join the system. Low-impedance mic input lines and specially designed circuitry make Clear-Com channels virtually immune to RFI and dimmer noise.

Clear-Com stations are interconnected with two-conductor, shielded microphone cable (or individually shielded multi-pair cable as required). Portable stations are connected with 2 conductor cables with 3-pin XLR connectors. One wire, connected to pin 2, carries the DC power from a Main Station or Power Supply to all Remote Stations. The other wire, connected to pin 3, carries the 2-way (duplex) audio information. The shield, connected to pin 1, acts as a common ground. One termination per channel is needed throughout the intercom network, and is usually located in the Main Station or Power Supply.

Clear-Com Main Stations, Power Supplies and certain Remote Stations each have an auxiliary program input with its own volume control, which allows an external audio source to be fed to the intercom system.

Visual Signal Circuitry (Call Lights), a standard feature on all Main and Remote Stations, allows the user to attract the attention of operators who have removed their headsets. Certain stations also have an audible Tone Alert feature which can be useful for this purpose.

Clear-Com manufactures a wide variety of both portable and fixed-installation units. All are compatible with each other. Clear-Com intercom systems can also interface with other communication systems and devices.

1.2 Power Distribution and Short Circuit Protection

A Main Station or Power Supply is the heart of an intercom system. It has special features which are not found in traditional designs. It must supply low-noise DC current to multiple intercom lines. It must continue to operate in adverse conditions such as low AC line voltage, momentary shorts on the DC power lines to the stations, and excessive peak loads during power-on conditions.

Use the [calculator](#) available on this hyperlink (see Fig. 1-1 for illustration) to determine how many Speaker Stations and Beltpacks can be powered in varying combinations by a Main Station or Power Supply. Additional power supplies can be connected for additional power capability if required by the application. The current requirements of Clear-Com Remote Stations and Beltpacks vary with model and use. A station which is simply "on" and not being used may draw only a small amount of current. Contact your dealer or Clear-Com if you require further assistance in determining the overall current requirements of your system.

1. Enter quantity of each power supply
2. Enter quantity of each accessory
3. **Green** indicates how many AMPs under budget
4. **Red** indicates how many Amps over budget
5. If **Red**, reduce accessory quantity to be under budget or Increase Power Supply quantity to be over budget
6. If **Green**, you are within the power budget

	<u>Max Current (AMP)</u>	<u>QTY</u>	<u>Power Budget</u>
Power Supplies			
PK-7	0.400	1	0.36
PS-702*	1.800	1	1.62
PS-704*	1.800	1	1.62

**sum of all channels*

PS Total Budget **3.6**

AMPs **Over/Under** budget: 2.225

Accessories		Acc Total Budget 1.375	
RS-701	0.028	1	0.028
RS-702	0.040	1	0.040
RS-703	0.040	1	0.040
RM-702	0.110	1	0.110
RM-704	0.195	1	0.195
KB-701	0.110	1	0.110
KB-702	0.110	1	0.110
KB-702GM	0.110	1	0.110
HB-702	0.100	1	0.100
HB-704	0.100	1	0.100
TW-12C	0.050	1	0.050
IF-4W4	0.050	1	0.050
EF-701M	0.080	1	0.080
TW-47	0.060	1	0.060
TWC-701	0.030	1	0.030
RS-601	0.050	1	0.050
RS-602	0.062	1	0.062
RS-501	0.050	1	0.050

Fig 1-1: Screenshot of Power Supply Calculator available on Clear-com website

For example, the MS-702 provides DC power to operate Clear-Com beltpacks and remote stations. The power is distributed between the two channels and will support up to 40 RS-601 beltpacks or 10 speaker stations or 12 headset stations.

Clear-Com’s fail-safe design automatically shuts down the power to a channel when a short circuit or electronic overload is sensed on that channel. The other channel will continue to operate normally. Once the fault condition is removed, the MS-702’s fail-safe circuit will restore power, even under full load conditions. LED indicators signal a short or overload on either channel.

The DC power output details are:

- 1.2A continuous output
- 2A peak output (not exceeding the 1.2A rating for more than 2 seconds per 1 minute period)

The station internal power supply senses the difference between short-term and long-term shorts and overload conditions. After the first few times a short or overload occurs, the power supply will try to restore power after only 0.5 seconds. If the short or overload persists or occurs repeatedly, the power supply will take progressively longer (to a maximum of 20 seconds) to try to restore power. This protects the power supply from damage due to overheating. Once the short is removed, the channel will recover, even under a full load condition. Shorts are generally caused by miswiring or damaged cables. Overloads are generally caused by connecting too many beltpacks and stations to a channel.

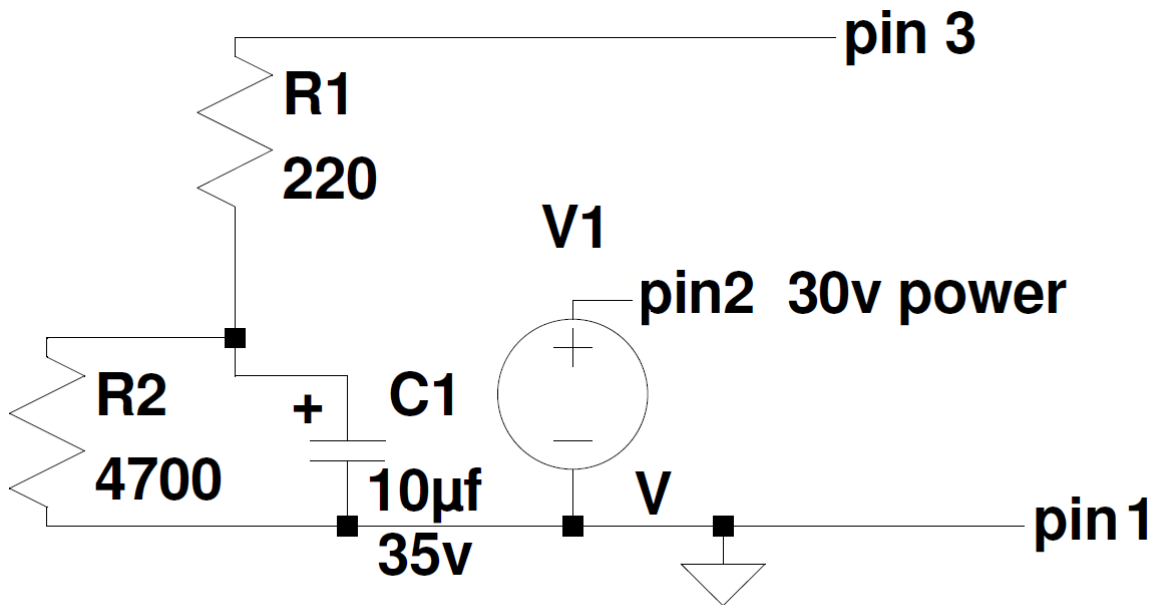


Figure 1-1 Clear-Com line termination

2 Installing an Intercom System

When considering how to install and wire an intercom system, several factors must be taken into account. These include the number of stations, the length of the cable runs and whether single or multiple channels are required. If multi-channel stations are connected with multi-pair cables, then crosstalk becomes an important issue. Crosstalk is not a factor with single-channel systems or multi-channel systems where each channel is run on its own individual cable to single-channel Remote Stations. While the physical considerations include ease of installation, type of cabling, station location, etc., the electrical considerations are concerned primarily with the capacitance between conductors on the intercom line, and the DC resistance in the ground return of the intercom line.

Note: PIN 1 and the shell of the XLR plug on the interconnect cables should NOT be connected together.

Excessive resistance in the conductors of the cable results in a loss of sidetone null at Remote Stations, and some overall loss of level. Excessive resistance in the ground conductor or shield greatly increases crosstalk between channels. This can significantly affect the performance of multi-channel systems.

2.1 Single-Channel System

In a single-channel system, there are two general methods of wiring Remote Stations to the Power Supply. Any one method may be used exclusively in a small system, and both may be used in various combinations for a larger system.

- 1) **Daisy Chain:** Remote stations and beltpacks are wired from one station to the next and so on along each line connected to a Main Station. This requires the least amount of cable, but may be impractical due to the system layout. Also, if a break occurs in the line, all stations down line of the break will be disconnected from the party line.



Figure 2-1 Party Line Daisy Chain

- 2) **Hub or Star:** Each Remote Station is wired directly back to a Main Station or to a split of a line wired directly to a Main Station.

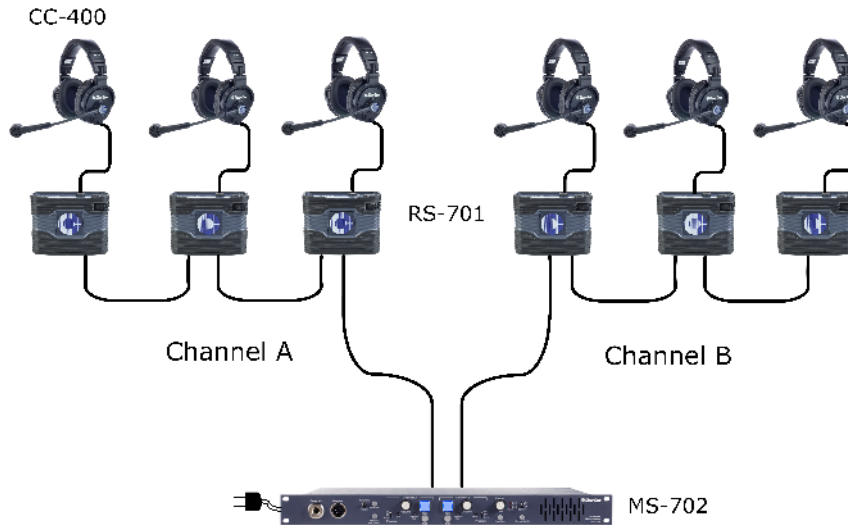


Figure 2-2 Party Line Hub Configuration

2.2 Multi-Channel System

In a multi-channel system where each channel is run on its own cable and connected only to single channel Remote Stations as in the following diagram, there are no crosstalk issues because the channels do not share a common ground. Consult the table in the next section for cable recommendations.


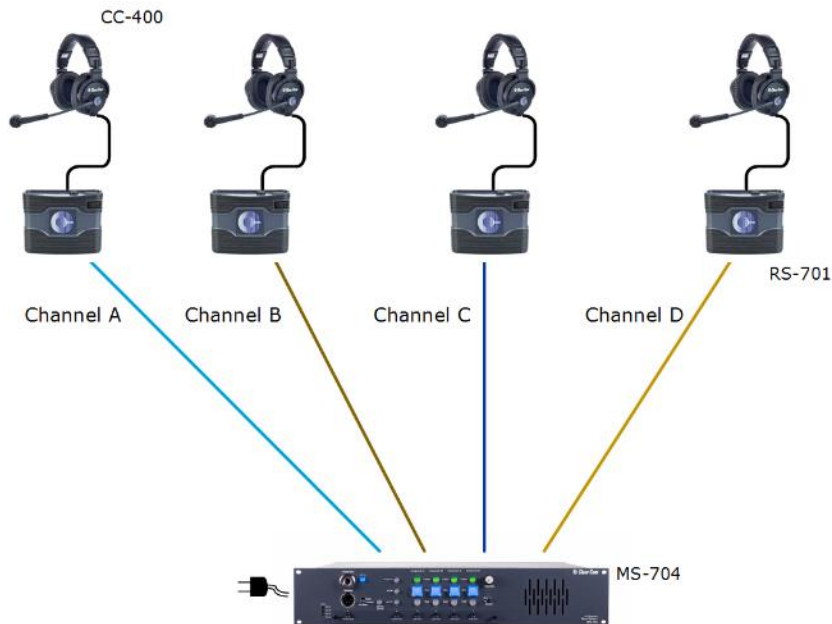


Figure 2-3 Multi-Channel Party Line

It is also important to centrally locate the multi-channel Main Station or Power Supply containing the termination. Crosstalk does not exist at the termination point, but can increase in proportion to the length of the wiring to multi-channel stations. If the termination is centrally located and the wiring length guidelines in the following section are adhered to, then crosstalk will be at a minimum.

2.2.1 Crosstalk Considerations in a Multi-Channel System

In a multi-channel system where multiple channels are run from a Main Station to a Remote Station as in the following diagram, crosstalk can be an issue. This is because the channels will share a common ground at both ends of the cable run.

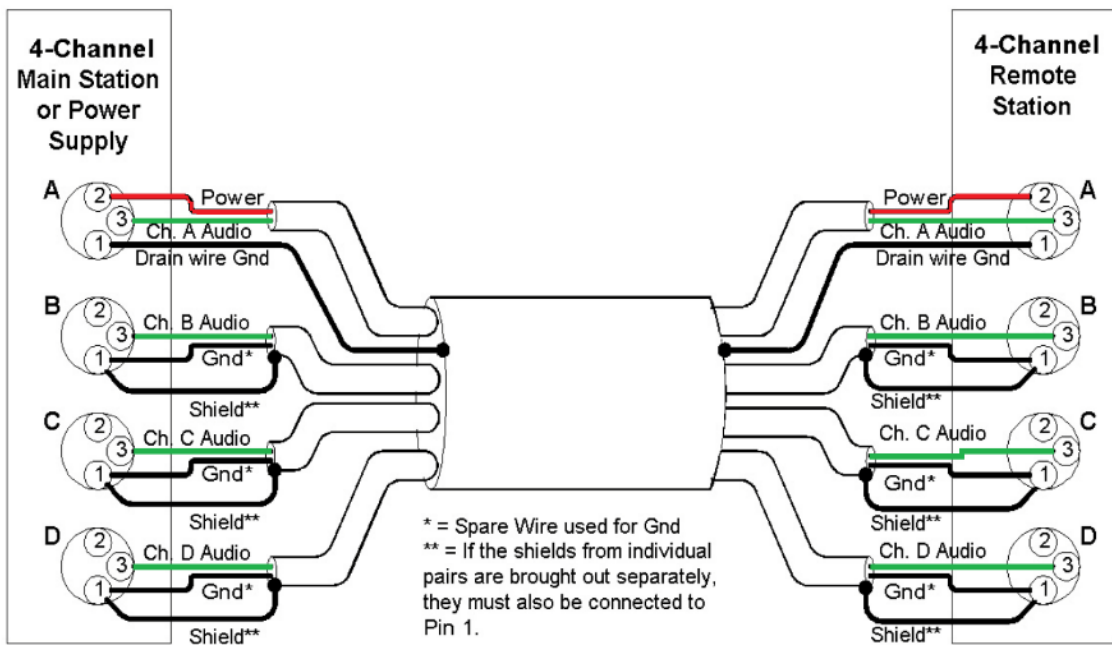

Party Line Multi-Channel Configuration

When multiple channels are fed to Remote Stations, the amount of crosstalk between channels is proportional to the DC resistance of the ground return path back to the channel terminations. To minimize this crosstalk between channels when running more than one channel in a multi-pair cable, keep the DC resistance of the ground return as low as possible. Ideally, this should be less than 2 Ohms. This can be achieved as follows:

- Keep cable runs under 500 feet. If a longer cable run is unavoidable and approaches 1000 feet or more, make sure the appropriate lone line option switches or jumpers are set in the stations. Refer to the individual station manuals for further information.
- Use a cable whose common shield has a low DC resistance.

- Connect unused cable wires of a multi-pair cable to the Pin 1 shield.

Note: All multi-pair cables must have individually shielded pairs.

The performance of a Clear-Com system depends upon the use of Clear-Com or Clear-Com approved compatible headsets. Use of headsets other than these can induce crosstalk into a multi-channel system through the headset cable. Clear-Com also recommends against the use of headset extension cables or headset "Y" cables, as they will increase crosstalk into a multi-channel system.

2.3 Intercom Cable Considerations

The Clear-Com intercom line is intended to run on one shielded cable pair per intercom channel. One conductor carries audio, and the other conductor carries the DC power for Remote Stations. The shield serves as the ground return for the audio and power conductors. When choosing interconnect cable, keep the following considerations in mind:

- **Keep cable runs under 500 feet.** The DC resistance of the ground or common conductor affects crosstalk. For permanent installation runs longer than 500 feet, do not use wire smaller than 20 gauge. The capacitance of the interconnect cable affects system frequency response and sidetone stability. Total capacitance should not be greater than 0.25 uF.

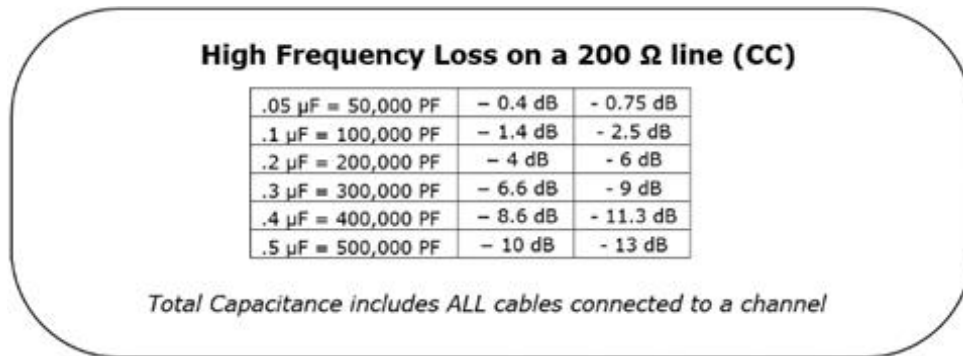


Figure 2-4 High Frequency Loss

- **Ground Isolation:** The Pin 1 ground connection of each XLR connector must be isolated from the chassis. Pin 1 should not be connected to the shell of the XLR connector.
- **Multi-pair Cable:** Individually shielded multi-pair cable is acceptable for use in multi-channel systems. For crosstalk considerations the shields must be tied together on both ends of the cable to produce the lowest possible DC resistance path for the ground return.

Part #	Pairs	AWG/stranding	O.D. Inch	Single Capacitance pf/ft	.1uf Distance Feet	Shield Resistance Ω per 1000 feet	Fire Rating	Application
9463F	1	20AWG(42x36)	0.243	36	2777	5.00	CM	Portable
1800F	1	24AWG(42x40)	0.221	26	3846	6.42	C12R	Portable
1696A	1	22AWG(7x30)	0.235	26	3846	5.90	NONE	Portable
8412	1	20AWG(26x34)	0.262	58	1724	4.50	NONE	Portable
9207	1	20AWG(7x28)	0.330	23	4347	1.74	CMG	Portable
8428	1	18AWG(41x34)	0.290	60	1667	2.70	NONE	Portable
3074F	1	18AWG(7x26)	0.460	25	4000	2.83	CMG	Portable
8408	1	16AWG(65x34)	0.380	55	1818	2.40	NONE	Portable
1505A	coax	#20 solid	0.233	16.3	6135	3.80	CMG	Fixed
8762	1	20AWG(7x28)	0.204	49	2041	10.50	CM	Fixed
8760	1	18AWG(16x30)	0.222	44	2273	20.50	CM	Fixed
Typical Star, Quad	—	2X24	0.236	62	1612	9.10	—	—
1634A	2	22AWG solid	0.431	17	5882	2.30	CMG	Fixed
6543PA	4	22AWG(7x30)	0.252	45.5	2020	27.00	Plenum	Fixed

Wire Gage	#10	#12	#14	#18	#20	#22	#24	#26
Ω per 1000 feet	1	1.5	2.6	4.2	10.5	16.8	27	42

1 amp through 4.2 ohms = 4.2 volts drop

amps x resistance = voltage drop

Figure 2-5 Wire chart for Encore

The Effects of Resistance and Capacitance on Audio Quality

Wire gauge Vs resistance

Wire gauge	#10	#12	#14	#16	#18	#20	#22	#24	#26
Ohms per 1000 feet	1.0	1.5	2.6	4.2	6.6	10.5	16.8	27	42


Estimating Voltage Drop

It is preferred to have no more than 10 volts drop in the line
 Desirable to keep power supply to less than 3 amps per channel to avoid damage due to shortcut.

Example:

A station draws 150 mA on 200 feet of #22 with #24 drain
 Resistance = 3.36 Ohms (#22) + 5.4 Ohm, #24 drain = 8.76 Ohms loop resistance
 Therefore 8.76 Ohms x 0.15 A = 1.314 V drop.

Estimating Crosstalk due to common ground resistance in Multi-Channel Systems

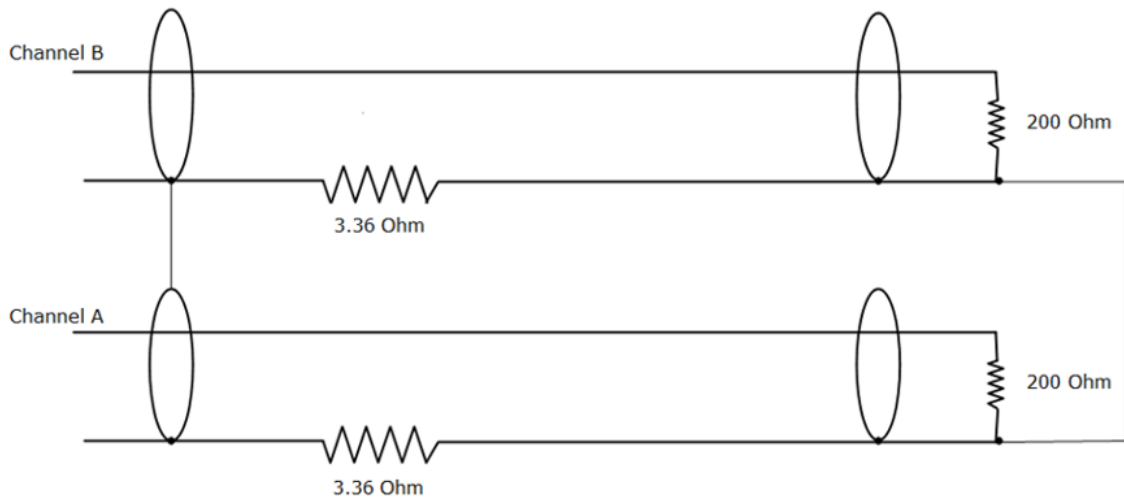

200 feet with #22 wire
 1.68 Ohms ground return resistance
 Crosstalk = -41.5 dB

Ground Resistance (Ohm)

- 1.0 Ohm = -46.0 dB crosstalk
- 1.5 Ohm = -43.0 dB crosstalk
- 2.0 Ohm = -40.0 dB crosstalk
- 2.5 Ohm = -38.0 dB crosstalk
- 3.0 Ohm = -36.5 dB crosstalk
- 4.0 Ohm = -34.0 dB crosstalk

Note: For better than 50 dB channel crosstalk use:

- **Portable Installation Cable:** Practical cable for portable system interconnections is flexible, two-conductor, shielded microphone cable. We suggest using BELDEN #9463F (20 Gauge). It is also possible to use 22 Gauge wire (BELDEN 8451).
- **Permanent Installation Cable:** Vinyl-jacketed shielded pair is the cable of choice for permanent installations. Placing the cable in conduit is recommended but not necessary. We recommend BELDEN #9207 (20 Gauge)

Make sure all cabling and installations are inspected and approved by the local fire authority.

2.4 Installing the Stations

First, choose the location for the Main Station or Power Supply. These units require access to AC power. They should be located away from other equipment that generates excessive amounts of heat. Also, choose locations for each Remote Station and Speaker Station. Choose general locations and areas of use for the beltacks. Determine the locations for other Clear-Com equipment which will connect to the intercom lines. The choice of location will depend upon and often define the wiring scheme. It is very helpful to create a drawing showing where each component will be located as well as where the wiring will run.

It is recommended to install all stations connected to the same AC for returns and ground.

2.5 Connections

The following sections describe the connections provided on the intercom stations:

2.5.1 Intercom Line Connection:

The rear panel of Main Stations, Power Supplies, Remote Stations, and other stations contain between one and three 3-pin male XLR connectors for each intercom line. These connectors are wired in parallel. Any single-channel station or channel of a multi-channel station connected on a line plugged into Channel A of the Main Station will be "party-lined" with all the other stations on that channel. In a multi-channel system, the goal is to assign specific people to the correct group, i.e. the other people they need to be in contact with the most. This is particularly important when the party line users are on a single-channel beltack or station; less so if they are on multi-channel stations. The pinout of the intercom connectors is as follows:

- Pin 1 --- Ground (Shield)
- Pin 2 --- Power
- Pin 3 --- Audio
- Shell is not connected to chassis

2.5.2 Line Termination:

The fundamental concept of Clear-Com Party-Line intercom is that all channels are terminated in one location, preferably at a Main Station or Power Supply.

Note: All intercom lines must be terminated. Care must be taken not to double-terminate a line. All unused intercom lines must also be terminated.

Switching the channel terminations ON and OFF is done with switches or jumpers on the Main Station. In most systems, the terminations should be in the ON position (default setting). Clear-Com Power Supplies also provide switch-selectable termination networks on all intercom lines. Refer to the User Manual for the specific Main Station or Power Supply for the exact location. It is up to the user to ensure that the terminations are set correctly. An unterminated line will cause excessive levels, possible oscillation of line drivers, and squealing in the headsets. An intercom line with double or multiple terminations will cause low levels and the inability to null the headsets.

The termination switches on a Main Station should be set to the OFF position only if the channel is terminated by another Main Station or Power Supply in the system.

If there are no other Main Stations or Power Supplies terminating the line, the termination switch on each channel of the Main Station should be switched to ON.

2.5.3 Headset Connector:

The headset connector is located on the front panel of all stations. Clear-Com headsets are recommended, but others can be used if they meet the following requirements:

- Mic Type --- Dynamic; 150 to 250 Ohms impedance; -55 dB output level
- Headphone --- Dynamic; 50 to 2000 Ohms impedance

The wiring of the headset is to be as follows:

- Pin 1 --- Mic common
- Pin 2 --- Mic hot
- Pin 3 --- Headphone common
- Pin 4 --- Headphone hot
- Shell is not connected to chassis


The mic and headphone wiring in the headset cord must be individually shielded. **Do not connect Pins 1 and 3 together.** Headset extension cords or headset "Y" cables are not recommended because they will increase crosstalk between channels.

If you choose to ignore this warning, the schematic below may work for you:

Headset extension cable (if you must have one)

2 separate shielded pairs

All shields onnectedto pin 1 at one end

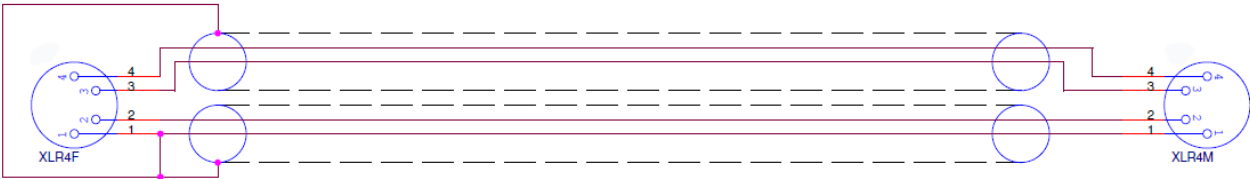

connect pin 1 to shell for Telex PH-88
earphone and mike must be very well isolated

2.5.4 Panel Mic Connector:

Clear-Com recommends the GM-9 and GM-18 plug-in panel microphones for use with all stations having a panel mic connector. The GM-9 is 9 inches long and the GM-18 is 18 inches long. The microphone is an electret type. The ¼-inch phone jack on the microphone mates with the Panel Mic receptacle on the front panel.

To install a GM-9 or GM-18 microphone, use the following steps:

Check the set screw in the mic mounting flange to make sure it is clear of the threads in the bushing.

Screw the microphone into the bushing hand tight.

Set the set screw on top of the bushing to lock the microphone in place.

2.5.5 Hot Mic Out / IFB System:

Some Main and Remote Stations have an interface to the External Line In jack on Clear-Com's IFB System. This connection is a ¼-inch phone jack on the rear panel. It provides a 0 dBu output signal from the selected headset or panel microphone on the station. It connects using a standard 2-wire and shield stereo ¼-inch plug-to-plug cable such as the Clear-Com P/N 73016501 (18 inch) or P/N 73016502 (5 foot). It allows the station's microphone to be used to cue talent through the IFB System. A control signal sent into this connector from the IFB System can optionally

disconnect the station's microphone from the intercom line(s). The jack is wired as follows:

- Ring --- Ext. IFB Control Signal Input
- Tip --- Hot Mic Audio Output
- Sleeve --- Ground (Shield)

2.5.6 Stage Announce Output:

Some Main and Remote Stations have a 3-pin XLR male connector on the rear panel to feed into a studio PA. Pressing the Announce button on the front panel places the audio from the selected headset or panel microphone on the rear panel connector. Optionally, pressing the Announce button can also disconnect the selected headset or panel microphone from the intercom line(s). This option is controlled by the Interrupt Announce option switch. Simultaneously, if the program audio feed to the Announce Output is enabled, it is interrupted by the announcement. Program audio feed to the Announce Output is selected by setting a jumper on the Main board to the ON position. The pinout of the Announce Out connector is as follows:

- Pin 1 --- Ground (Shield)
- Pin 2 --- - Signal
- Pin 3 --- + Signal

The audio output is balanced and transformer isolated. It has a 600 Ohm impedance and a nominal output level of 0 dBu. A shielded twisted pair cable should be used in the cable wired to this connector.

2.5.7 Relay Out:

On some Main and Remote Stations with an Announce button, a dry set of relay contacts is provided through a ¼-inch jack, DB-15F, or screw terminals on the rear panel. These contacts can activate an external device such as a PA amplifier to another room. The contacts are rated for 2.0 Amps at 24 VDC. If screw terminals are provided on the Main Station, their connections are labeled N/C, C and N/O. The ¼-inch jack is wired as follows:

- Ring --- Normally Closed Contact --- N/C
- Tip --- Common Contact --- C
- Sleeve --- Normally Open Contact --- N/O

2.5.8 Program Input:

A 3-pin XLR female connector on most Main Stations and Power Supplies provides the program input to the intercom system. The Program Input accepts a balanced or unbalanced line-level audio signal from -20 dBu to +10 dBu. There is an option to feed program audio to the Announce Output. This is selected by setting a jumper on

the Main board to the ON position. When this option is selected, a 0 dBu signal on the Program Input will produce a 0dBu signal on the Announce Output.

The pinout of the Program Input connector is as follows:

- Pin 1 --- Ground (Shield)
- Pin 2 --- + Signal
- Pin 3 --- - Signal

2.5.9 External Speaker:

Some Main Stations provide an 8 Ohm external speaker output through a ¼-inch jack.

2.5.10 Auxiliary Connector:

Some Main Stations provide a DB-15 type Auxiliary connector on the rear panel. This allows connection to a variety of devices, depending upon the capabilities and features of that particular Main Station. Refer to the Main Station User Manual for further details on the connections provided.

2.5.11 AC Power Connection:

An IEC type 320 connector is provided on most Main Stations and Power Supplies to interface to the appropriate AC power cord to be used. Refer to the chart on the inside back cover of this manual. Main Stations and Power Supplies can either be switched between 115 or 230 VAC operation or will automatically adjust to voltages from 100 to 240 VAC at 50 or 60 Hz. Consult the User Manual for information on the particular unit.

3 **Configuring Clear-Com Products to Work Together**

Clear-Com Intercom Systems are designed to integrate with many other Clear-Com products. The following sections describe some frequently used configurations. Most of these configurations involve the use of Clear-Com's versatile Call signal. This signal travels silently through the intercom wiring and is often used to get the attention of operators who have removed their headsets. However, as the following descriptions show, it can also be used to control a variety of functions.

3.1 **TW-47 Two-Way Radio Interface**

It is often important to link walkie-talkies into an intercom system to extend communication to remote persons. The TW-47 Two-Way Radio Interface connects between an intercom line and a variety of walkie-talkies, using one walkie-talkie as a base station. Refer to the TW-47 Instruction Manual for details describing the connection of the TW-47. To interface with the TW-47, the option switches of the Main or Remote Station must be set as follows:

- Enable the Momentary Talk option switch or jumper on the appropriate channel of the Main or Remote Station. Refer to the User Manual for the Main or Remote Station to locate this switch or jumper. This will cause the Talk button to have a momentary only action and not latch.
- Enable the Call on Talk option switch or jumper on the appropriate channel of the Main or Remote Station. Again, refer to the User Manual for the Main to locate this switch or jumper. This will cause the Call signal to be activated whenever the Talk button is held down.

When the Talk button is depressed, the Call signal will be activated, causing the transmitter connected to the TW-47 to be keyed. Audio on the intercom line will then be transmitted over the two-way radio. When the Talk button is released, the Call signal will disappear and audio from the receiver of the two-way radio will appear on the intercom line, allowing a reply.

3.2 **KB-701 Speaker Station**

KB-701 devices are single channel speaker stations. In the following description the current model KB-701 is cited but the functionality is similar or identical on the earlier stations.

The KB-701 Speaker Station provides intercom communication capability in places where wearing a headset is not feasible. It can be optioned for several remote control functions. Refer to the appropriate Instruction Manual for details on setting the option switches.

A Main or Remote Station can control the microphone on a KB-701 set to Remote Listen operating mode, allowing the KB-701 operator to talk "hands free." When the option switches of the KB-701 are set to this mode, depressing the Call button on the Main or Remote Station will turn on the microphone of the KB-701. Care must be taken in the design of the intercom system to make sure that the call signal will not be needed for other functions on the same channel. For example, it would not be possible to interface *both* the TW-47 and a KB-701 in Remote Listen mode on the *same* intercom channel. In this case, separate intercom channels should be used for each interface.

The KB-701 also has Remote Page and Remote Listen-Page modes. In these modes, the speaker of the KB-701 can be turned on by a Call signal from the Main Station. The flexibility of Clear-Com Main and Remote Stations allows the following variations on these modes:

- A Main or Remote Station can be used to talk to other intercom stations, and enable the KB-701 speaker only when necessary. To talk to all intercom stations *except* the KB-701, press the Main or Remote Station Talk button. To talk to the KB-701 as well, press *both* the Call and Talk buttons.
- A Main or Remote Station can enable the KB-701 speaker *whenever* the operator is talking to other intercom stations. Set the Call on Talk option switch or jumper for the channel the KB-701 is on. This will cause the Call signal to be activated whenever the Talk button is held down. This will have the effect of turning on the KB-701 speaker whenever the Talk button is pressed. If it is preferable to prevent the Talk button from latching, set the Momentary Talk option switch or jumper for that channel to the ON position. This will cause the Talk button to have a momentary only action and not latch.

3.3 RM-702/RM-802-IM Remote Station

An MS-702/RM-802-IM Main Station can be configured to provide program audio on a channel but allow this audio to be interrupted whenever the Talk button for that channel is pressed. If a Remote Station, such as the RM-702 is used along with the Main Station in this configuration, it can be important to have the program audio interrupted by the operator of either station. To do this, the Main or Remote Stations must be set up as follows:

- Enable the Momentary Talk option switch or jumper on the appropriate channel of the Main and Remote Stations. Refer to the User Manual for to locate this switch or jumper. This will cause the Talk button to have a momentary only action and not latch.
- Enable the Call on Talk option switch or jumper on the appropriate channel of the Main and Remote Stations. Again, refer to the User Manual for these

stations to locate this switch or jumper. This will cause the Call signal to be activated whenever the Talk button is held down.

- Feed the program audio into the Program Audio connector *on the Remote Station*.

With this setup, any Call signal on this intercom channel, including Call signals from beltacks, will cause the program audio to be interrupted.

4 System Checkout

Before you turn on the power, perform the following tests:

4.1 Check Termination

- 3) There should be one and only one termination for each channel in the system. This termination is usually set to ON at the Main Station or Power Supply. To ascertain that only one termination is present on the channel, perform the following test:

Note: The location of the termination switch varies with model. On some products, the termination switches are on the rear panel; on others they are jumpers inside the unit. Consult the unit's manual for the location.

- 1) Using a multimeter, measure the resistance between pins 1 and 3 on one of the Channel A XLR connectors at the rear of the unit.
- 2) If the channel is terminated properly, then the resistance should measure approximately 4,000 – 5,000 Ohms. A very high channel resistance means the channel is not terminated. Channel resistance of 2,000 Ohms indicates a double-termination. If a double-termination is indicated, locate the other terminated Power Supply or Main Station and set its termination to OFF.
- 3) Repeat for the other channels.
- 4) Check resistance between Chassis Ground and pin 1. Using an Ohmmeter, measure the resistance from pin 1 on the Main Station or Power Supply to chassis ground. The measurement should read 10 Ohms. A high reading (over 100 Ohms) indicates that the 10 Ohm resistor in the unit has failed and requires replacement. Failure to perform the replacement will result in an audible "buzz" in the system. A reading of less than 10 Ohms (or a short) typically indicates that the shell and pin 1 of one of the interconnect cables are shorted together. Test the individual cables until the culprit is located and repair or replace the cable.

Note: Pin 1 and the shell of the XLR plug on the interconnect cables should NOT be connected together.

4.2 Check Intercom Cable Resistance

For minimal crosstalk, the ground resistance of the intercom cables should be as low as possible, preferably less than 2 Ohms. Disconnect an intercom line from the Main Station or Power Supply. At the point in the intercom line furthest from the unit, connect a clip lead jumper between pins 1 and 2. Back at the "powered" end, use an

Ohmmeter to measure the resistance between pins 1 and 2. A value of less than 4 Ohms is ideal, but a value of 4 to 10 Ohms is acceptable.

4.3 Final Tests

After you turn the power ON:

- 1) Check for proper voltage on pin 2 of any intercom line or jack in a channel. It should read 26-30 Volts.
- 2) Test for proper operation of Call Signaling. Activate the Call Signal on any beltpack or station. The call light on the Main Station should illuminate and then go out when the call button is released. If enabled, the Tone Alert should sound. Activate the Call Signal on the Main Station. The call lights on any beltpacks or stations should illuminate and then go out when the call button is released.
- 3) Adjust the sidetone on this and all stations. (Refer to the manual for each specific unit for instructions.) Using the headset or panel mic, make sure that the Main Station can communicate with attached beltpacks or stations. Check that other stations can be heard through the panel speaker.
- 4) If connected, check that Program Input, Announce Output and Hot Mic Output / IFB System jacks are functional. Verify the operation of the controls that affect the function of these inputs and outputs. Refer to the User Manual of the particular Main Station.

5 Troubleshooting

5.1 System does not operate

No power to main station or power supply. Green POWER LED is not illuminated and no SHORT LED's are illuminated

- 1) **Cause:** No AC power to the main station or power supply.

Solution: Make sure the power switch on the rear panel is turned ON. Check AC connection and cable. Plug into dependable AC source.

- 2) **Cause:** Main Station or Power Supply has an internal Power Supply failure.

Solution: Unit requires servicing.

5.2 Red SHORT LED illuminated

- 1) **Cause:** Short or overload on that [channel](#) due to a shorted or incorrectly wired cable.

Solution: Remove cables one at a time from system until the faulty line is located. (The red Short LED will then turn off.) Check for shorts between pins 1 and 2 or improper cable wiring. Once the short is removed, the main station or power supply will reset automatically and the power will come back up within several seconds.

- 2) **Cause:** Defective Remote Station.

Solution: Check Remote Station and replace if necessary.

5.3 Both red SHORT LEDs are illuminated

- 1) **Cause:** System is overloaded.

Solution: Remove cables, one at a time from system to help determine where the excess current requirements lie. Re-evaluate system current needs.

- 2) **Cause:** Short in multipair cable.

Solution: Remove cables, one at a time from system until the faulty line is located. Check for shorts between pins 1 and 2 or improper cable wiring.

5.4 Hum or buzz in system

- 1) **Cause:** Inductive pickup caused by close proximity of this Main Station or connected Remote Stations to power lines or transformers.

Solution: Relocate offending unit.

- 2) **Cause:** 10 Ohm chassis ground resistor is open.

Solution: Check the DC resistance for 10 Ohms between the chassis and pin 1 of any intercom connector.

If this condition happens, it is because the system ground came into contact with something that was "HOT" with respect to the Power Supply earth ground. If this occurs, carefully check the system ground and AC distribution in the area.

This is a potentially dangerous situation. A shock hazard may exist between the metal boom of a Remote Station headset and ground.

5.5 System feedback (Acoustical)

- 1) **Cause:** Listen level control at this station or a remote station is set too high.

Solution: Adjust.

- 2) **Cause:** Sidetone null control at this station or a remote station is not adjusted correctly.

Solution: Adjust. See the user manual for the relevant unit.

Cause: Channel unterminated.

Solution: Set the Main Station or Power Supply termination switch for that channel to the ON position.

- 3) **Cause:** A headset extension cord was used.

Solution: Headset extension cords are not recommended.

5.6 Excessive crosstalk

- 1) **Cause:** High DC resistance in ground return.
Solution: Use heavier cable; add additional conductor(s) to ground return.
- 2) **Cause:** MULTI-CHANNEL cable pairs are not individually shielded.
Solution: Replace cable with individually shield pairs.
- 3) **Cause:** Headset cables are not wired properly or shielded properly.
Solution: Correct wiring. Use headsets with properly shielded wiring.

5.7 Program signal sounds distorted.

- 1) **Cause:** Overload of Program Input circuit.
Solution: Reduce Program Input level or reduce the gain of the program signal at the source, such as an audio mixer.

5.8 Call signals do not function.

- 1) **Cause:** Excessive DC loading of intercom line.
Solution: Remove any audio transformers or other equipment which may be connected across the intercom line. If equipment other than Clear-Com intercom equipment must be connected to the intercom line, please contact Clear-Com application or service personnel for advice.
- 2) **Cause:** Far too many terminations on the intercom line.
Solution: Check all Main Stations and Power Supplies to make sure each intercom channel is terminated at only one point.

5.9 Call Signals do not turn off

Text to be supplied by C.B.

6 Typical Applications

6.1 Cable or School Television Studio

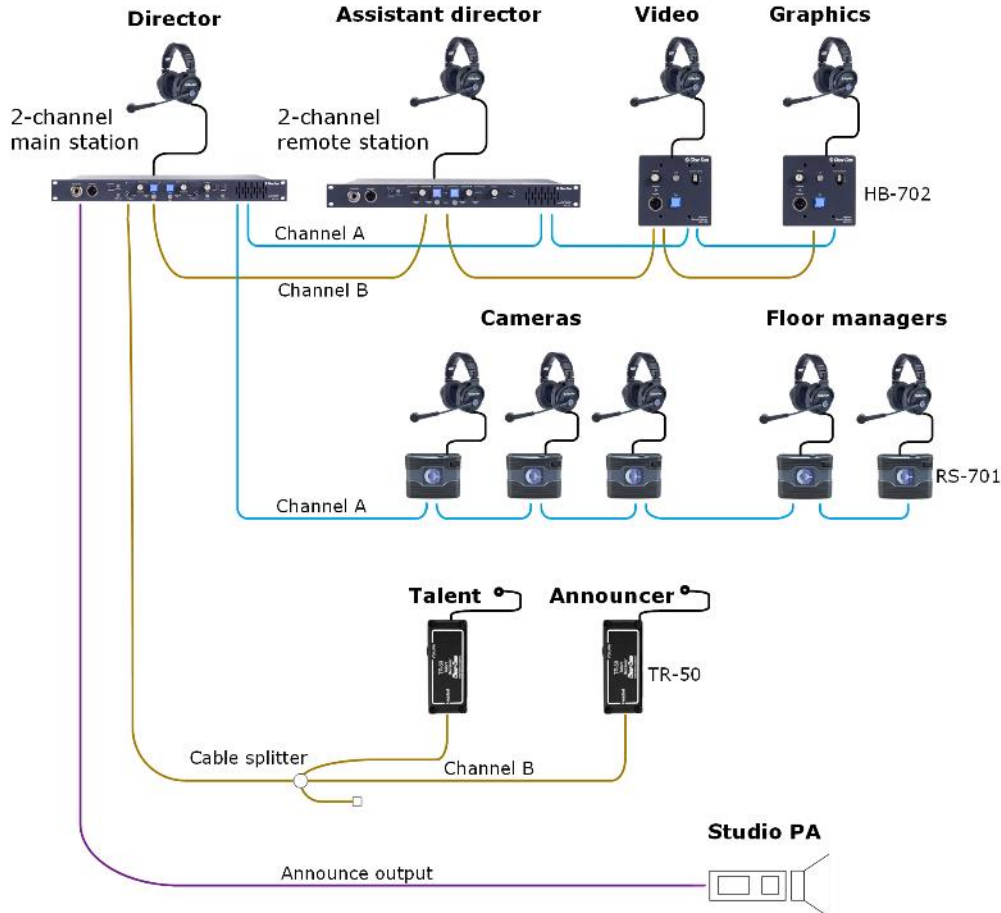


Figure 6-1 Party Line Studio Application

The typical Cable or School Television Studio installation shown in the preceding diagram is centered around a two-channel Main Station, which also powers the system. The Director operates this station and an Assistant Director operates a two-channel Remote Station. A line of single-channel beltpacks is connected to Channel A. The beltpacks are used by camera operators and floor managers. Communication between these people and the Director and Assistant Director is on Channel A. Two-channel Headset Stations are wired to both channels A and B and are used by the video and graphics people. This allows them the flexibility of communicating on either Channel A or Channel B.

Program feed audio is connected to the Remote Station so it can be heard by the Director as well as the Talent and Announcers. A Call signal can interrupt the program audio that feeds into the Remote Station. Talent and Announcers use

Talent Receivers which are connected to Channel B. The Director and Assistant Director must be able to interrupt this program audio to cue the Talent and Announcers, so Channel B would be programmed as follows:

- The Momentary Talk B option switch on the Main and Remote Stations must be set to the ON (down) position. This will cause the Channel B Talk button to have a momentary only action and not latch. Refer to the appropriate User Manuals for the location of these settings.
- The Call on Talk B option switch on the Main and Remote Stations must be set to the ON (down) position. This will cause the Channel B Talk button to activate the Call signal.
- The Channel B On-Off-Interrupt switch on the Remote Station must be set to the INTERRUPT position. The Channel A On-Off-Interrupt switch must be set to the OFF position, assuming that program audio should *not* be heard on this channel.
- The Channel B Program Level trimpot on the Remote Station should be adjusted so that the program feed is at a comfortable level for the Talent and Announcer.

If desired, the Director could turn on the Party Line Link (A+B) switch on the Main Station during rehearsals to combine the communication between everyone on both channels.

The Main or Remote Station speaker can be turned on whenever necessary, when others in the area need to hear. If it is turned on, it will automatically dip in level whenever the panel or headset microphone is on.

A PA amplifier can be connected to the Announce Output of the Main Station, allowing the Director to make announcements to everyone in the studio. The Relay Out connection can be used to switch the PA amplifier if necessary. Depending upon the situation, these announcements may tend to interfere with communication on the intercom line. If this is a problem, set the Interrupt Announce Option Switch on the Main Station to the ON position. This will prevent announcements from being heard on the intercom line.

Although this application was illustrated using 2-channel Main and Remote Stations, it could have been implemented using 4-channel (or more) stations. Doing so could further split the functional areas and allow more individual conversations to occur at once.

6.2 Theatre 1

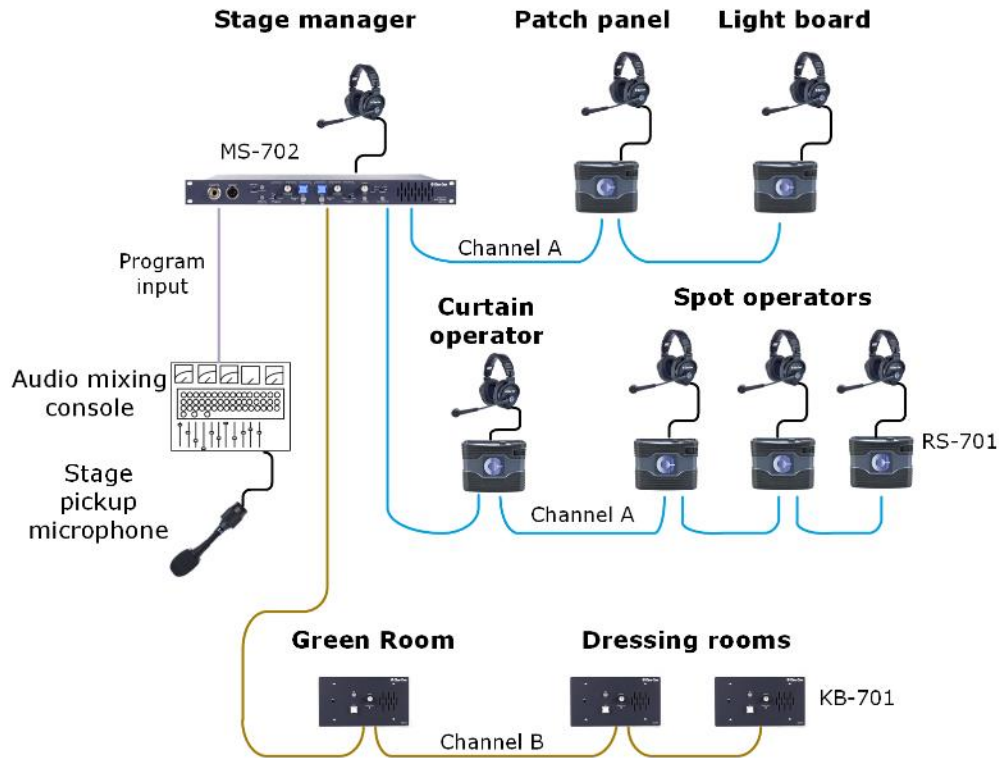


Figure 6-2 Party Line Theatre Application Example 1

In the preceding diagram of a typical Theatre installation, the Stage Manager operates a two-channel Main Station, which also powers the system. Several single-channel belt packs are connected to Channel A. The belt packs are used by curtain, spot, patch panel, and light board operators. Communication between these people and the Stage Manager is on Channel A.

Some Main Stations contain a Tone Alert function. This will audibly signal the Stage Manager if the stage personnel press the Call buttons on their belt packs. If needed, the Tone Alert function can be enabled using the button on the front panel. The volume of this signal can be set using the Tone Alert Volume control.

An audio mixing console output from the stage pickup microphones is connected to the Program Input of the Main Station. If desired, this audio can be placed at a low (or any) level on Channel A. The level can be adjusted using the Channel A Program Level trimpot. If this audio is to be interrupted by communication from the Stage Manager, then the Channel A On-Off-Interrupt switch should be set to the INTERRUPT position. If stage microphone audio should be heard on Channel A at all times, the On-Off-Interrupt switch should be set to the ON position. If it is not desirable to have audio from the stage microphones on this intercom channel, the On-Off-Interrupt switch should be set to the OFF position.

The Program Level control can be used to adjust the stage microphone audio level the Stage Manager hears. Whenever the Stage Manager does not need to monitor this, the Program Level control can be turned fully counter-clockwise.

Channel B is connected to Speaker Stations such as the Clear-Com KB-701/KB-702 which are installed in the green room and in dressing rooms. These Speaker stations should be optioned for Normal operation, which enables the speaker and allows a push-to-talk function for replying to the Stage Manager. Channel B on the Main Station would typically be programmed as follows:

- The Momentary Talk B option switch must be set to the ON position. This will cause the Channel B Talk button to have a momentary only action and not latch. The Stage Manager could then only be heard by the actors and actresses in the Green Room and Dressing Rooms when the Channel B Talk button is held down.
- The Channel B On-Off-Interrupt switch must be set to the INTERRUPT position. This causes the Channel B Talk button to interrupt the audio from the stage microphone.
- The Channel B Program Level trimpot should be adjusted to a comfortable level in the Speaker Stations.

The stage microphone audio can then be heard by the actors and actresses in the green room and dressing rooms. The stage microphone audio heard by the waiting actors and actresses will be interrupted whenever the Stage Manager talks to them.

Because of the two-channel capability, communication between the Stage Manager and stage equipment operators cannot be heard by the actors and actresses, and vice-versa. This eliminates confusion and miscommunication. If desired, the Stage Manager can turn on the Party Line Link (A+B) switch on the Main Station during rehearsals to combine the communication between everyone on both channels.

6.3 Theatre 2

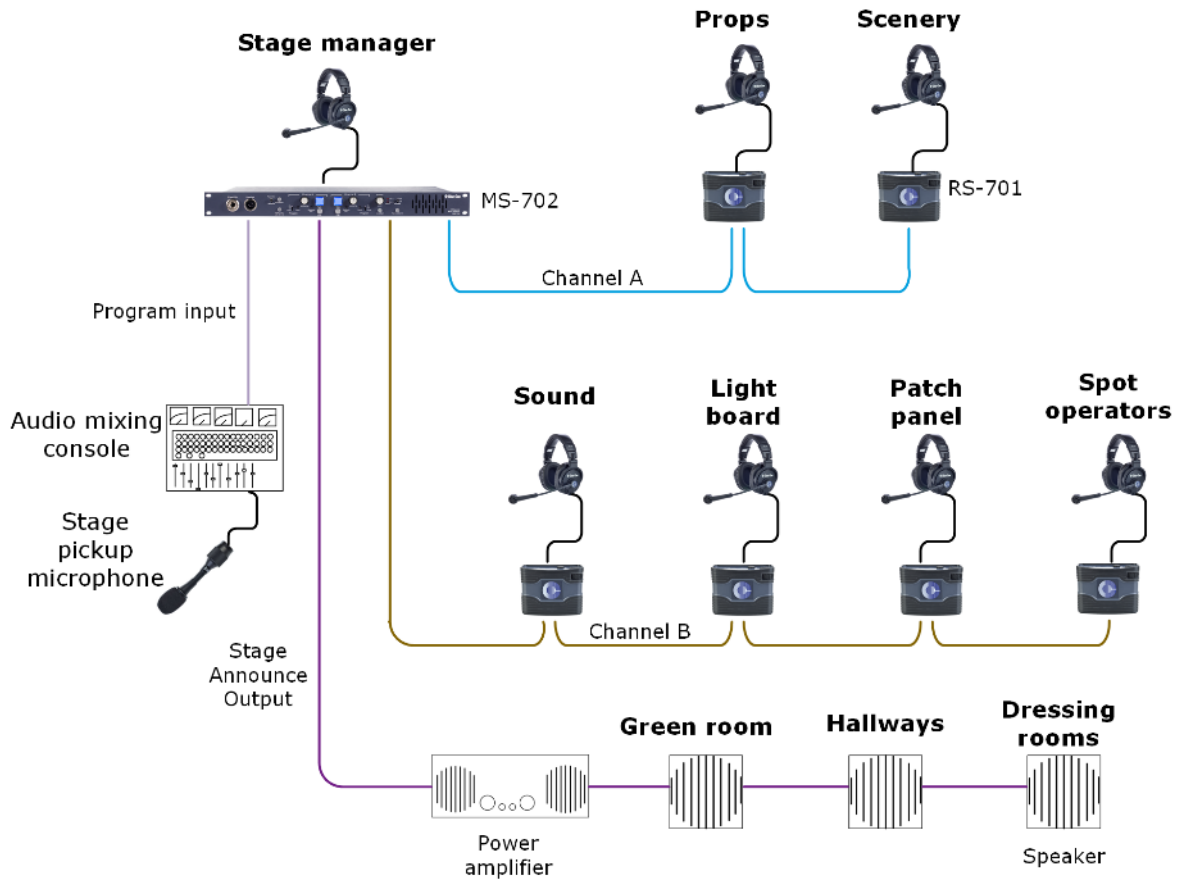


Figure 6-3 Party Line Theatre Application Example 2

In this example of another typical Theatre installation, the Stage Manager operates a two-channel Main Station, which also powers the system. Several single-channel beltpacks are connected to Channel A. The beltpacks are used by props and scenery people. Communication between these people and the Stage Manager is on Channel A.

Several single-channel beltpacks are also connected to Channel B. The beltpacks are used by sound, light board, patch panel, and spot operators. Communication between these people and the Stage Manager is on Channel B.

A mixing board audio output from the stage pickup microphones is connected to the Program Input of the Main Station. Using the Program Audio to Stage Announce option, this audio is routed out the Stage Announce output of the Main Station and into an external power amplifier. This amplifier drives speakers in the Green Room, Hallways, and Dressing Rooms. The people in these rooms will then be able to hear sound from the stage. The Stage Manager presses the Announce button on the Main Station to communicate with the people in these rooms. When this happens, the audio from the stage is interrupted automatically. As long as the Stage Manager

does not have a Talk set, the announcement is heard only by the people in the Green Room, Hallways, and Dressing Rooms, but not by the people on intercom Channels A or B.

To adjust the stage announce and program levels:

- 1) Press the Announce button and adjust the program audio power amplifier for the correct level from the speakers connected to it. The Stage Announce output will provide a 0 dBu signal to the stage announce amplifier.
- 2) With the Announce button released, adjust the Mixing Console so that the Program level is correct as heard through the speakers connected to the stage announce amplifier. The output from the Mixing Console will likely be 0 dBu or less.
- 3) If the Program Audio is to be heard on the intercom channels, adjust the Program Level controls for the channels accordingly. Refer to the MS-702, MS-704/RM-704, or SB-704 Station manual to locate these controls.
- 4) If the Stage Manager is to hear the Program Audio, adjust the Program Level control on the MS-702, MS-802-IM, MS-704, RM-704, RM-802-IM or SB-704 Station. If or whenever the Stage Manager does not need to monitor this, the Program Level control can be turned fully counter-clockwise.

If the program audio on the intercom channel(s) is to be interrupted when the Stage Manager presses the Talk button, then the On-Off-Interrupt switch for that channel should be set to the INTERRUPT position. If stage microphone audio should be heard on a channel at all times, its On-Off-Interrupt switch should be set to the ON position. If it is not desirable to have audio from the stage microphones on an intercom channel, its On-Off-Interrupt switch should be set to the OFF position.

Because of the multiple-channel capability, the Stage Manager can communicate individually to three separate areas: Props and Scenery, Sound and Lighting, and Costuming, Makeup, and Talent. This eliminates confusion and miscommunication. If desired, the Stage Manager can turn on the Party Line Link (A+B) switch on the Main Station during rehearsals to combine the communication between the Props and Scenery channel and the Sound and Lighting channel.

The drawback of the Program Audio to Stage Announce option is that the people in the Green Room, Hallways, and Dressing rooms cannot communicate back to the Stage Manager. This may not be drawback in all cases. The benefit of this option is that it adds an additional channel of communication from the Stage Manager.

6.4 Theatre 3

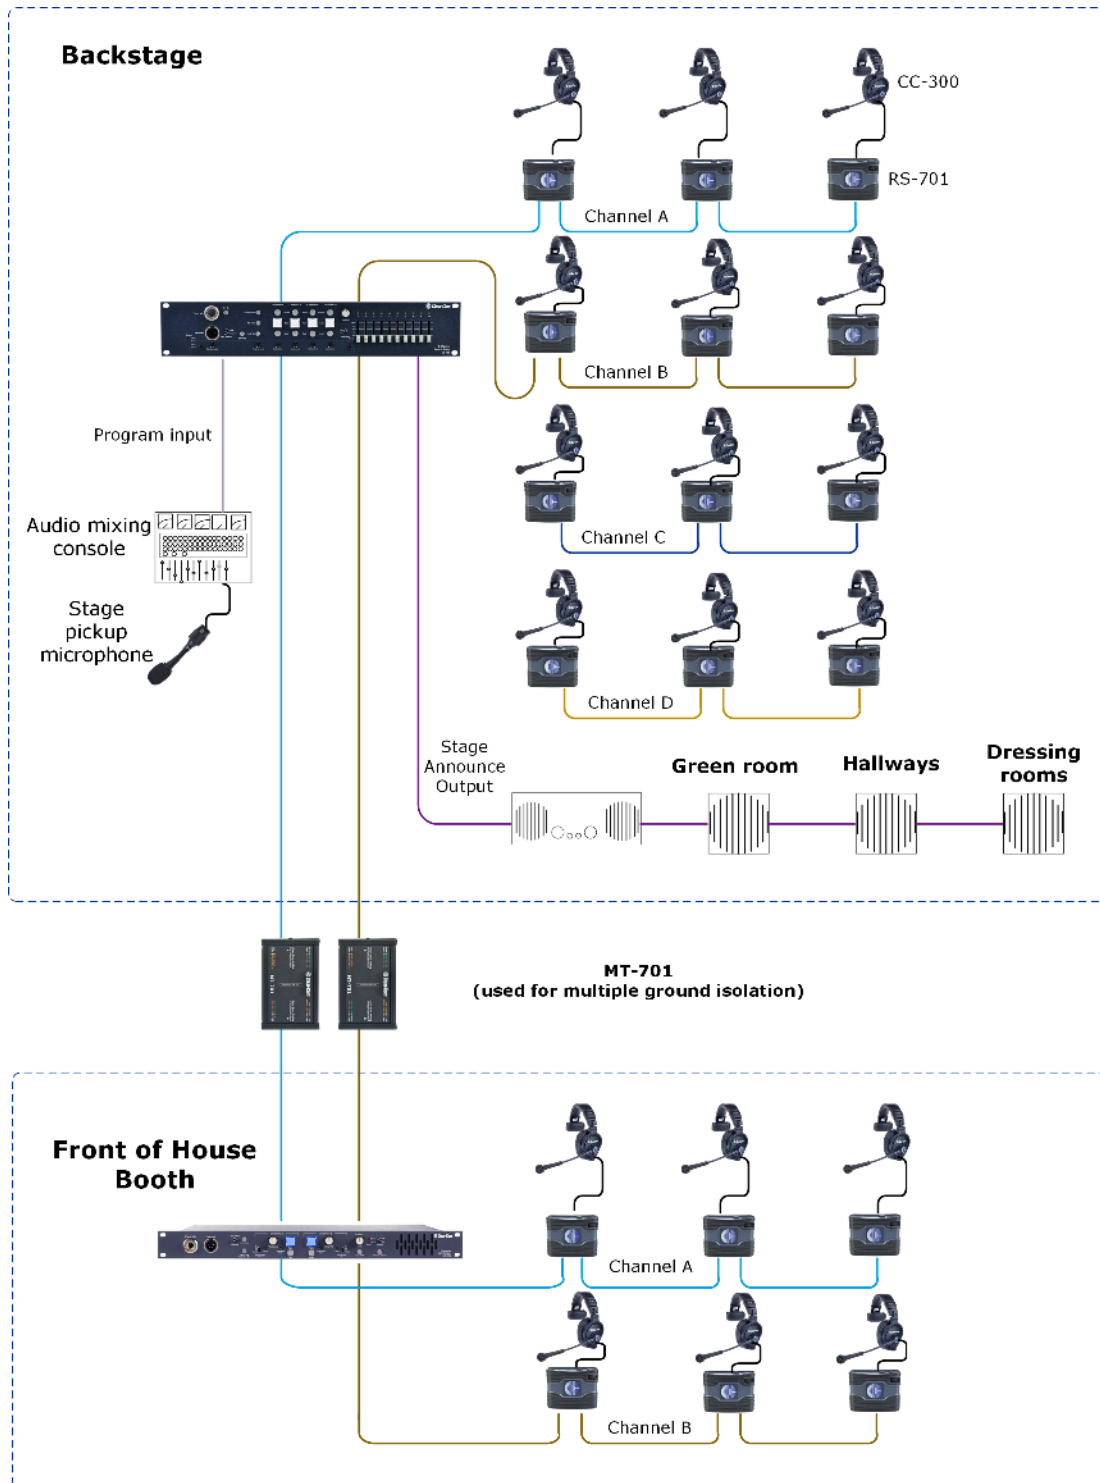


Figure 6-4 Theatre Application Example 3

In most systems:

It will be necessary to plug multiple intercom stations into AC power outlets throughout the building. Backstage, Front Of House, Projection Booth, Orchestra Pit, Costuming & Makeup dressing rooms, etc. Plugging intercom stations into AC outlets across a large building can create 'ground' currents. The round AC 'ground' ins are not exactly the same voltage in all locations due to wiring differences. These small current difference in the AC ground wire create noise in the intercom system.

Whenever possible:

All intercom equipment should be plugged into a single power outlet strip.

In this way, all the intercom equipment grounds are the same, returning to the same AC power distribution panel.

In places where a quiet connection to the AC power is not possible, a MT701 isolator can be used, to transformer couple the audio, optically pass call signals and lift grounds.

In this example (Figure 6-4):

The backstage system is separately powered with all terminations ON. The Front of House system is also separately powered. There is a 2-channel main station in the Front of House booth, electrically coupled to the IC line with the MT-701 but with isolation in the power and ground connections. It is this isolation from the Back Stage main station that avoids 60Hz hum and noise.

Note: It is best to avoid using multiple MT-701s on a single channel.

Excellent articles on this subject of grounding for audio are on the internet. Recommended are the grounding articles by Bill Whitlock at Jensen. These articles are available from the Jensen Transformer company website. Also, check his reprints from the *AES and Sound Communications* magazine.

6.5 ENG/EFP Truck

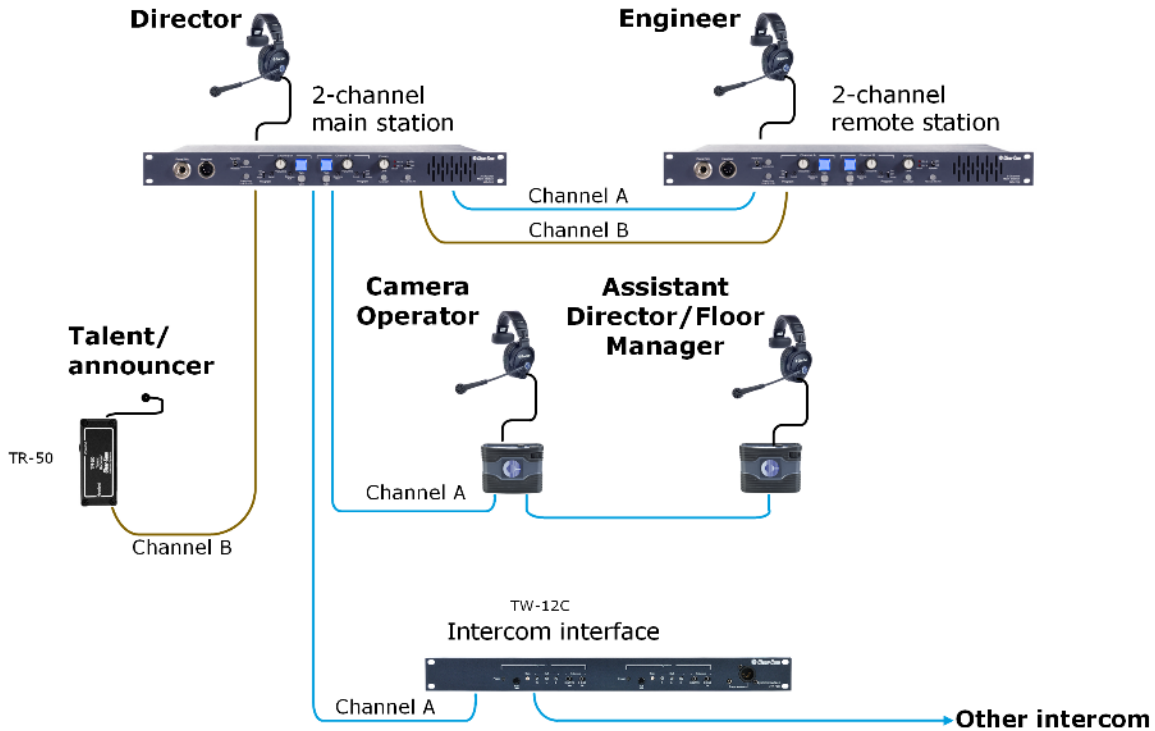


Figure 6-5 Party Line Eng/EFT Truck Application

In the preceding diagram of a typical ENG/EFP Truck installation, a 2-Channel Main Station powers the intercom system. The Director operates the Main Station, and an Engineer operates the Remote Station. A line of single-channel belt packs is connected to Channel A and are used by camera operators and floor managers. Communication between these people and the Director is on Channel A. If 4-channel (or more) stations were used in this application, the functional areas of communications could be further split to allow more individual conversations to occur at once.

A System Interface such as the Clear-Com TW-12C system interface can be used to interconnect with another intercom system which may be on site, whether or not it is a Clear-Com system. It isolates the intercom audio and compensates for level and impedance differences. It also isolates and translates call signals for single channel RTS systems. Channel B is connected to a Talent Receiver for Talent or an Announcer. Program feed audio from the studio feed can be heard by the Director and Engineer, as well as the Talent or Announcer. The Call on Talk B and Momentary Talk B options switches on the Main and Remote Stations would be set to the ON (down) position. This would cause the program audio heard by the Talent and Announcer to be interrupted whenever the Director talks to them, but only while the Director is holding the Talk button.

7 Program Audio to Announce Output Option

The MS-702, MS-802-IM, MS-704, RM-704, RM-802-IM and SB-704 products include the Program Audio to Stage Announce Output option. This option allows audio from the main Program Audio input to be routed through the Stage Announce output. Pressing the Announce button interrupts this audio and instead routes audio from the selected panel or headset microphone through the Stage Announce output.

This facility is also available as standard on the MS-702, MS-802-IM, MS-704, RM-704, RM-802-IM and SB-704 products.

7.1 Theatre Application

One application of the Stage Announce option is illustrated in the following diagram:

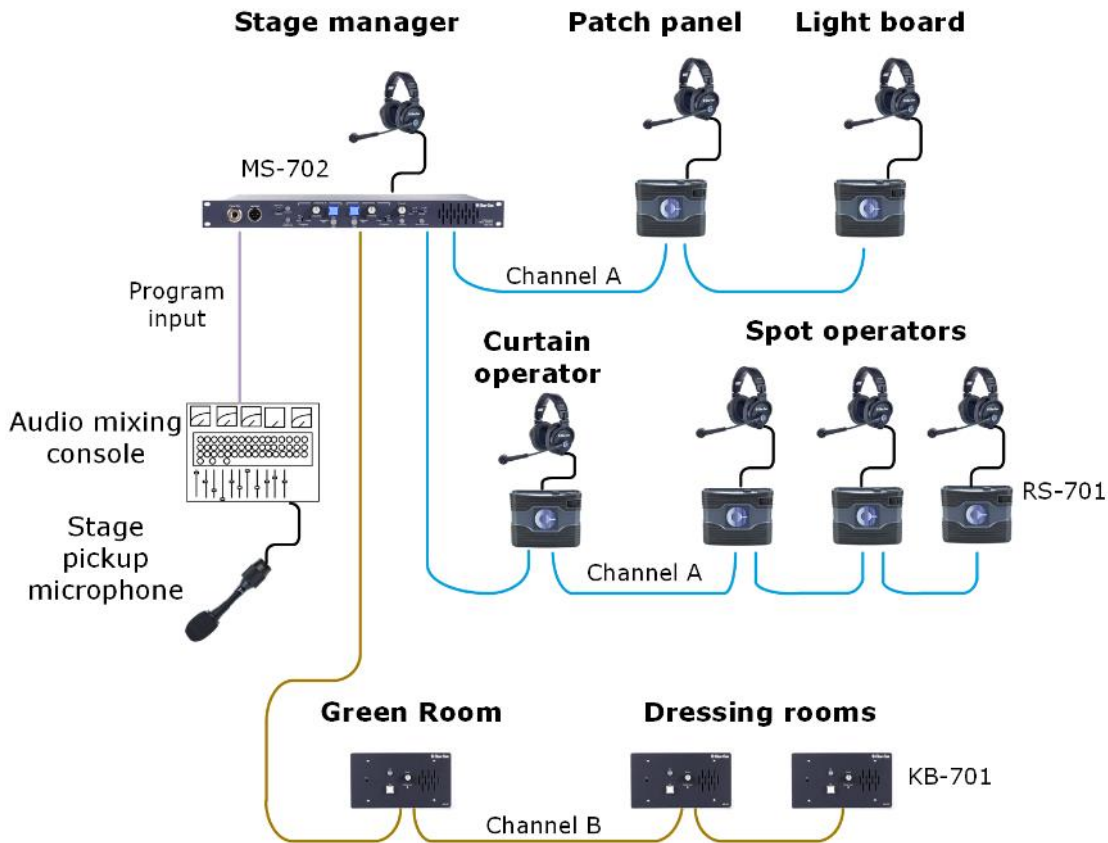


Figure 7-1 Party Line Theatre Application

In the preceding diagram of a typical Theatre installation, the Stage Manager operates a two-channel Main Station, which also powers the system. Several single-channel beltpacks are connected to Channel A. The beltpacks are used by props and scenery people. Communication between these people and the Stage Manager is on Channel A.

Several single-channel beltacks are also connected to Channel B. The beltacks are used by sound, light board, patch panel, and spot operators. Communication between these people and the Stage Manager is on Channel B.

A mixing board audio output from the stage pickup microphones is connected to the Program Input of the Main Station. Using the Program Audio to Stage Announce option, this audio is routed out the Stage Announce output of the Main Station and into an external power amplifier. This amplifier drives speakers in the Green Room, Hallways, and Dressing Rooms. The people in these rooms will then be able to hear sound from the stage. The Stage Manager presses the Announce button on the Main Station to communicate with the people in these rooms. When this happens, the audio from the stage is interrupted automatically. As long as the Stage Manager does not have a Talk set, the announcement is heard only by the people in the Green Room, Hallways, and Dressing Rooms, but not by the people on intercom Channels A or B.

If desired, the stage audio can be placed at a low (or any) level on Channel A and/or Channel B. The level can be adjusted using the Program Level trimpots for each channel. If this audio is to be interrupted whenever the Stage Manager presses the Talk button, then the On-Off-Interrupt switch for that channel should be set to the INTERRUPT position. If stage microphone audio should be heard on a channel at all times, its On-Off-Interrupt switch should be set to the ON position. If it is not desirable to have audio from the stage microphones on an intercom channel, its On-Off-Interrupt switch should be set to the OFF position.

The Program Level control can be used to adjust the program audio level the Stage Manager hears. If or whenever the Stage Manager does not need to monitor this, the Program Level control can be turned fully counter-clockwise.

Because of the multiple-channel capability, the Stage Manager can communicate individually to three separate areas: Props and Scenery, Sound and Lighting, and Costuming, Makeup, and Talent. This eliminates confusion and miscommunication. If desired, the Stage Manager can turn on the Party Line Link (A+B) switch on the Main Station during rehearsals to combine the communication between the Props and Scenery channel and the Sound and Lighting channel.

The drawback of the Program Audio to Stage Announce option is that the people in the Green Room, Hallways, and Dressing rooms cannot communicate back to the Stage Manager. This may not be drawback in all cases. The benefit of this option is that it adds an additional channel of communication from the Stage Manager.

7.2 Setting the Option

The setting for the Program Audio to Stage Announce option is an internal jumper which may be positioned in either an ON or an OFF position. Products containing this option are shipped from the factory with the option turned OFF.

Refer to the model's operating manual for instructions on setting this jumper.

The other jump switches available on the MS-702/MS-802-IM are

- Detail B, JP1: alert tone delay
- Detail C, JP5: call/talk interrupt select
- Detail E, JP3: headset limiter
- Detail H, JP4: channel combine

On other models, these options are available as switches on the front panel. See the instruction manual for each device for more information.

7.3 System Setup

After connecting the MS-232, MS-702, MS-802-IM, MS-440, MS-704, RM-704, RM-802-IM, SB-440 or SB-704 Station, perform the following steps to assure that the audio level will be correct at each listening point:

- 1) Press the Announce button and adjust the stage announce power amplifier for the correct level from the speakers connected to it. The Stage Announce output will provide a 0 dBu signal to the stage announce amplifier.
- 2) With the Announce button released, adjust the Mixing Console so that the Program level is correct as heard through the speakers connected to the stage announce amplifier. The output from the Mixing Console will likely be 0 dBu or less.
- 3) If the Program Audio is to be heard on the intercom channels, adjust the Program Level controls for the channels accordingly. Refer to the MS-232, MS-702, MS-802-IM, MS-440, MS-704, RM-704, RM-802-IM, SB-440 or SB-704 Station manual to locate these controls.
- 4) Lastly, if the Stage Manager is to hear the Program Audio, adjust this level on the, MS-232, MS-702, MS-802-IM, MS-440, MS-704, RM-704, RM-802-IM, SB-440 or SB-704 Station.

8 **Appendix 1: Partyline Products (to assist in upgrading existing systems)**

The following table provides information on Party Line products indicating which model numbers have similar functionality to assist in upgrading existing systems where the current products are no longer available. As the functionality of the equivalent products may be slightly different the user should check the product manuals for details.

DESCRIPTION	ENCORE PRODUCT	PARTY LINE PRODUCT	INDUSTRIAL AND MARINE PRODUCT
2-Channel Main Station	MS-702	MS-222 MS-200	MS-802-IM
2-Channel Remote Station	RM-702	RM-220	RM-802-IM
2-Channel Portable Station	CS-702	CS-222	
4-Channel Main Station	MS-704	MS-400A	
4-Channel Remote Station	RM-704		
4-Channel Switchboard Main Station	SB-704	SB-412A	
12-Channel Source Assignment Panel	RCS-2700	RCS-2000	
Single Channel Wall Mount Speaker Station	KB-701	KB-212 KB112	

2-Channel Wall Mount Speaker Station	KB-702 KB-702GM	KB-211 KB-211GM	KB-802-GM-IM
2-Channel Wall Mount Headset Station	HB-702	MR-202	
4-Channel Wall Mount Headset Station	HB-704	MR-704	
2-Channel Power Supply	PS-702	PS-232	
4-Channel Power Supply	PS-704	PS464	
Program Interrupt Controller	PIC-4744	PIC-4704 PIC-4000	
System Interface	TWC-12C	TWC-12B	
4-Wire Interface	IF4W4	IF4B-2 IF4B-4	
2-Channel Intercom Adapter	TWC-701		
4-Channel Intercom Adapter	TWC-704		
2-Way Radio Interface	TW-47	TW-40	
Party Line to 4-Wire Interface	EF-701M	EF-1M	
Call Signal Flasher	FL-7	FL-1	
Lightweight Power Supply	PK-7	PK-5	

IFB Control Panel	AX-704	AX-4	
IFB Control Panel with Mic Connector	MA-704	MA-4	
Talent Receiver	TR-50	TR-50	
Announcer's Console	AB-700	AB-100	
Beltpacks	RS-701 RS-702 RS-703	RS-601 RS-602 RS-622 RS-603 RS-603R RS-623 RS-623R RS-501 RS-502 RS-522	RS-801-IM RS-802-IM

Table 8-1 Party Line Product Equivalences

9 Glossary

Some of the terms used when discussing critical communications for television or theatre may be new to you as they are unique to intercom applications. Although many of the terms are common to other audio applications, to be certain you understand their meanings we offer the following definitions:

All Call: Ability to push one button from the Main Station and talk to all channels at once on a multiple channel system.

Ambient Noise: Those background sounds which are not part of the specific communication but are picked up by the microphone. Selection of a good "noise-canceling" mic will reduce ambient noise.

Belt Pack: A portable electronics package worn on the belt or mounted on a wall or other convenient location. Interconnects to system with mic cable and is powered by a central Power Supply or Main Station.

Bridging, High Impedance (hi-Z): A method of connecting to an audio line (such as Clear-Com) without loading or taking appreciable power from that line. Simply stated, as you add more and more stations to the line, the volume remains constant.

Call Signaling: This feature is included with the majority of Clear-Com products. It is a visual indicator on a station (a lamp or LED) used to attract the attention of an operator who has removed the headset.

Channel: A channel is the line that connects parties together within a party line - it is a two-way talk path. For example, if you have six people who need to hear one director, you have a seven-station single-channel need. If the same director needs to speak privately to any one of the six, add a second channel. You now have a seven-station, two-channel system.

Closed-Circuit: Any intercom which is connected via cable (also called hard-wired). The other type would be Wireless. . .we make those too. However, if you want privacy and versatility, you probably want a closed-circuit system or a combination of both.

Cross Talk: Leakage of audio transmissions from one channel to another.

Dry Pair: A telephone term is used to describe a pair of wires (2 conductors) that carry audio but no voltage. Contrast this with a "Wet Pair" that carries both audio and voltage.

Duplex: Duplex refers to bi-directional communications. Normal communication between individuals talking face to face is "full duplex" -- in other words you can talk and listen simultaneously. The alternative is "half-duplex" such as a push-to-talk situation where one station at a time can talk while others listen. A walkie-talkie is a good example of half-duplex communication.

EFP: Electronic Field Production. An EFP truck contains the necessary audio, video, intercom, and other equipment to create these productions.

ENG: Electronic News Gathering. An ENG truck contains the necessary audio, video, intercom, communications, and other equipment to effectively support gathering news and transmitting news reports back to a studio.

IFB: The term means "Interrupt Fold Back." A Fold-Back is a monitor system that allows, for example, talent to hear their voices or musicians to hear their voices and instruments on stage. IFB (program interrupt) disconnects the audio source while the talk button on the Main Station is pushed.

ISO: A private conversation path. An ISO channel allows one to simply push a button and transfer themselves and the person they wish to speak with to an isolated channel.

Industrial Marine (IM): Product that is DNV certified for use in marine and industrial applications.

Linking: Linking ties separate channels into one single party line.

Main Station: This is a product that includes both the ability to communicate with multiple channels without connecting them together, and to power all the stations connected to these channels.

Master Station: A Remote Station which requires AC power to operate, and cannot power other stations

Multi-Channel: More than one channel

Party Line (P.L.): Intercom system where all people talking on the system can talk or listen to each other simultaneously. Also called conferencing.

Point to Point: One path to one person.

Program: Audio source that is fed into the intercom channels.

Program Interrupt: Disconnects or attenuates the audio source while the talk button on the Main Station is pushed. (IFB)

Remote Mic Kill (RMK): The ability for certain Main Stations to shut off all microphones on belt packs in a system.

Remote Station: Like the belt pack, this would be any of the products connected to the intercom line that allow duplex or half-duplex conversation, but do not contain a Power Supply.

Sidetone: This is your own voice heard in your earphone as you are speaking.

Stage Announce (SA): Redirects output of the Main Station's microphone to an external destination (such as a PA system).

Station: A station is connected to one or more channels. For example, if you have six people who need to hear one director, you have a seven-station single-channel need. If the same director needs to speak privately to any one

of the six, add a second channel. You now have a seven-station, two-channel system.

Termination: Passive network that is connected in each channel, usually on the Power Supply or Main Station.

10 Technical Support and Repair Policy

To ensure that your experience with Clear-Com and our World Class products is as beneficial, effective and efficient as possible, we would like to define the policies and share some "best practices" that can accelerate any problem solving processes which we may find necessary and to enhance your customer service experience. Our Technical Support, Return Material Authorization, and Repair Policies are set forth below. These Policies are subject to revision and constantly evolve in order to address our Customers' and the Market's needs. Therefore, these are provided by way of guidance and for information only and may be changed at any time with or without Notice.

10.1 Technical Support Policy

- a) Telephone, online, and e-mail technical support will be provided by the Customer Service Center free of charge during the Warranty Period.

- b) Technical support will be provided free of charge for all software products under the following conditions:
 - i) The application, operating, and embedded software is installed on a product covered by Clear-Com's Limited Warranty, and:
 - (1) The software is at the current release level; or,
 - (2) The software is one (1) version removed from current.
 - ii) Older versions of software will receive "best-effort" support, but will not be updated to correct reported bugs or add requested functionality.

- c) For Technical Support:
 - i) North and South America, (incl. Canada, Mexico, and the Caribbean) & US Military:
Hours: 0800 - 1700 Pacific Time
Days: Monday - Friday
Tel: +1 510 337 6600

Email: Support@Clearcom.com

ii) Europe, the Middle East and Africa:

Hours: 0800 - 2000 Central European Time

Days: Monday - Friday

Tel: +49 40 853 999 700

Email: TechnicalSupportEMEA@clearcom.com

iii) Asia-Pacific:

Hours: 0800 - 1700 Pacific Time

Days: Monday - Friday

Tel: +1 510 337 6600

Email: Support@Clearcom.com

d) Email Technical Support is available for all Clear-Com branded products free of charge for the life of the product, or two years after a product has been classified as obsolete, whichever comes first. To log or update a request, send an email to: Support@Clearcom.com.

e) Support for Distributor and Dealer Sales

i) Distributors and Dealers may utilize the Customer Service Centers once a system has been installed and commissioned. Clear-Com Systems and Applications Engineers will provide support to the Distributor from the pre-sales stage through to satisfactory installation for new system purchases. Customers will be encouraged to contact their Dealer or Distributor with their installation and technical support enquires rather than using the Customer Service Centers directly.

f) Support for Direct Sales

i) Customers may utilize the Customer Service Centers once a system has been installed and commissioned by Clear-Com Systems and Applications Engineers, or in the case of project installations, once the Project Team has completed the hand-over to the Support Centers.

10.2 Return Material Authorization Policy

- a) Authorizations: All products returned to Clear-Com or a Clear-Com Authorized Service Partner must be identified by a Return Material Authorization (RMA) number.

- b) The Customer will be provided with an RMA number upon contacting Clear-Com Sales Support as instructed below.

- c) The RMA number must be obtained from Clear-Com via phone or email prior to returning product to the Service Center. Product received by the Service Center without a proper RMA number is subject to return to the Customer at the Customer's expense.

- d) Damaged equipment will be repaired at the Customer's expense.

- e) Returns are subject to a 15% restocking fee.

- f) Advance Warranty Replacements (AWRs);
 - i) During the first 30 days of the Standard Warranty Period: Once the equipment fault has been verified by Clear-Com or its authorized representative, Clear-Com will ship a new replacement product. The Customer will be provided with an RMA number and be required to return the faulty equipment within 14 days of receipt of the replacement or will be invoiced for the list price of a new product.

 - ii) During days 31-90 of the Standard Warranty Period: Once the equipment fault has been verified by Clear-Com or its authorized representative, Clear-Com will ship a like-new, fully refurbished replacement product. The Customer will be provided with an RMA number and be required to return the faulty equipment within 14 days of receipt of the replacement or will be invoiced for the list price of a new product.

 - iii) To obtain an RMA number or request an AWR:
 - (1) North and South America, Asia-Pacific, and US Military:
Hours:0800 - 1700 Pacific Time

Days: Monday - Friday

Tel:+1 510 337 6600

Email: SalesSupportUS@Clearcom.com

(2) Europe, the Middle East and Africa:

Hours:0800 - 1700 GMT + 1

Days: Monday - Friday

Tel:+ 44 1223 815000

Email: SalesSupportEMEA@Clearcom.com

iv) Note: AWRs are not available for UHF WBS Analog wireless intercom systems. UHF WBS Analog wireless intercom systems out-of-box failures must be returned to Clear-Com for repair.

v) Note: Out-of-box failures returned after 90 days will be repaired and not replaced unless approved by Clear-Com Management.

vi) Note: AWRs are not available after 90 days of receipt of product unless an AWR Warranty Extension is purchased at the time of product purchase.

vii) Note: Shipping charges, including duties, taxes, and insurance (optional), to Clear-Com's factory are the responsibility of the Customer.

viii) Note: Shipping AWRs from Clear-Com is at Clear-Com's expense (normal ground or international economy delivery). Requests for expedited shipping (E.g. "Next-Day Air"), customs duties, and insurance are the responsibility of the Customer.

10.3 Repair Policy

a) Repair Authorizations: All products sent to Clear-Com or a Clear-Com Authorized Service Partner for repair must be identified by a Repair Authorization (RA) number.

b) The Customer will be provided with an RA number upon contacting Clear-Com Customer Services as instructed below.

c) The RA number must be obtained from Clear-Com via phone or email prior to returning product to the Service Center. Product received by the Service Center without a proper RA number is subject to return to the Customer at the Customer's expense.

d) Return for Repair

i) Customers are required to ship equipment at their own cost (including transportation, packing, transit, insurance, taxes and duties) to Clear-Com's designated location for repair.

(1) Clear-Com will pay for the equipment to be returned to the Customer when it is repaired under warranty.

(2) Shipping from Clear-Com is normal ground delivery or international economy.

(3) Requests for expedited shipping (E.g. "Next-Day Air"), customs duties, and insurance are the responsibility of the Customer.

ii) Clear-Com does not provide temporary replacement equipment ("loaner") during the period the product is at the factory for repair. Customers should consider a potential prolonged outage during the repair cycle, and if required for continuous operations purchase minimum spare equipment required or purchase an AWR Warranty Extension.

iii) No individual parts or subassemblies will be provided under warranty, and warranty repairs will be completed only by Clear-Com or its Authorized Service Partner

11 Compliance

Clear-Com, LLC, an HME Electronics, Inc, company is committed to compliance with the laws and regulations of each country where Clear-Com markets the product below.

Applicant Name : Clear-Com, LLC

Applicant Address : 1301 Marina Village Parkway, Suite 105, Alameda, California 94501, United States

Manufacturer Name : HM Electronics, Inc.

Manufacturer Address : 2848 Whiptail Loop, Carlsbad CA 92010 USA

Country of Origin : USA

Brand : Clear-Com

This document was prepared in the English language. In case this document is translated into another language and a discrepancy arises between languages, the English version shall prevail as being the version which best expresses the intent of the parties. Any notice or communication given in conjunction with this document must include an English version.

Caution: All products are compliant with regulatory requirements detailed in this document when the user follows all the installation instructions and operating conditions per Clear-Com specifications.

Caution: Product modifications not expressly approved by the party responsible for compliance can void the user's authority to operate the equipment.

Caution: Use of accessories and peripherals other than those recommended by Clear-Com may void the product's compliance as well as the user's authority to operate the equipment.

US Compliance Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Canada Compliance Notice

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Avis de conformité pour le Canada

Cet appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est soumise aux deux conditions suivantes:

- (1) cet appareil ne doit pas provoquer d'interférence, et
- (2) cet appareil doit accepter toute interférence radioélectrique subie, même si l'interférence est susceptible d'en compromettre le fonctionnement.

European Union (CE mark)

The CE marking indicates compliance with the following directives and standards.

Directives:

- Electromagnetic Compatibility Directive 2014/30/EU
- Low Voltage Directive 2014/35/EU
- RoHS Directive 2011/65/EU

Standards:

- EN 55032, EN 55024, EN 60950-1, EN 50581



Maritime Certification

The DNV-GL mark indicates conformity with DNVGL-CG-0339 Edition November 2016.



Location Classes:

The influence of the ambient environment on equipment depends upon the field of application on board. Environmental testing therefore implies tests being directly related to intended location on board as well as general tests, which are not directly related to location. There are five location classes: Temperature, humidity, vibration, enclosure and EMC. The allowed location of installation on board depends on the maritime approved location class.

Regulatory model MS802 was DNV-GL type approved for Temperature Location Class A, Humidity Location Class A, Vibration Location Class A, EMC Location Class A and Enclosure Location Class A.

Regulatory model MS802 is allowed to be installed in the control room. For more details please follow the Table 1 Location Class below.

Regulatory model MS802 is not allowed to be installed in bridge, machinery spaces, pump room, holds, rooms with no heating and open deck.

Note: MS802 must be installed in a rack with the bottom of the unit mating to a flat surface from a mounting shelf or mounting support. The mounting shelf or support must be secured to the rack in a manner that ensures it will remain flat during vibration.

Regulatory models RM802 and KB802G were DNV-GL type approved for Temperature Location Class A, Humidity Location Class A, Vibration Location Class A, EMC Location Class A & B and Enclosure Location Class A.

Regulatory models RM802 and KB802G are allowed to be installed in the control room and bridge. For more details please follow the Table 1 Location Class below.

Regulatory models RM802 and KB802G are not allowed to be installed in machinery spaces, pump room, holds, rooms with no heating and open deck.

Regulatory models RS801 and RS802 were DNV-GL type approved for Temperature Location Class B, Humidity Location Class A, Vibration Location Class A, EMC Location Class A and Enclosure Location Class B.

Regulatory models RS801 and RS802 are allowed to be installed in machinery spaces. For more details please follow the Table 1 Location Class below.

Regulatory models RS801 and RS802 are not allowed to be installed in control room, bridge, pump room, holds, rooms with no heating and open deck.

RS-801-IM, RS-802-IM	
Temperature	0°C to +55°C
Humidity	Relative humidity up to 96%
Vibration	Frequency range: 2–13.2 Hz, Amplitude: 1.0 mm (peak value) Frequency range: 13.2–100 Hz, Acceleration amplitude: 0.7 g
EMC	DNVGL-CG-0339 - Class A
Enclosure, Salt-Mist	IP 56

MS-802-IM	
Temperature	0°C to +50°C
Humidity	Relative humidity up to 96%
Vibration	Frequency range: 2 –13.2 Hz, Amplitude: 1.0 mm (peak value) Frequency range: 13.2–100 Hz, Acceleration amplitude: 0.7 g
EMC	DNVGL-CG-0339 - Class A
Enclosure	IP20

RM-802-IM, KB-802GM-IM	
Temperature	0°C to +50°C
Humidity	Relative humidity up to 96%
Vibration	Frequency range: 2–13.2 Hz, Amplitude: 1.0 mm (peak value) Frequency range: 13.2–100 Hz, Acceleration amplitude: 0.7 g
EMC	DNVGL-CG-0339 - Class A & B
Enclosure	IP20

Acknowledgement

Numerous employees, customers, consultants and sales partners in the 40+ years of Clear-Com history have contributed to this manual. We recognize and applaud these valuable contributions. Two individuals provided exceptional input: Charlie Butten, development engineer and the inventor of the original Clear-Com Partyline technology, and Emil Maignon (1955-2016), partyline support specialist and author/keeper of many unique applications for the PL product family. Without them, Clear-Com Partyline would not be the ubiquitous and highly sought-after product it is today.