


Attaching the Ferrite Core

You must attach the ferrite core before using the STUDIO-CAPTURE


If you are connecting a digital device to the COAXIAL IN (15/16) jack, you must attach the included ferrite core.

This is for the purpose of preventing electromagnetic noise; do not remove it.

1. Attach the ferrite core to the coaxial cable.

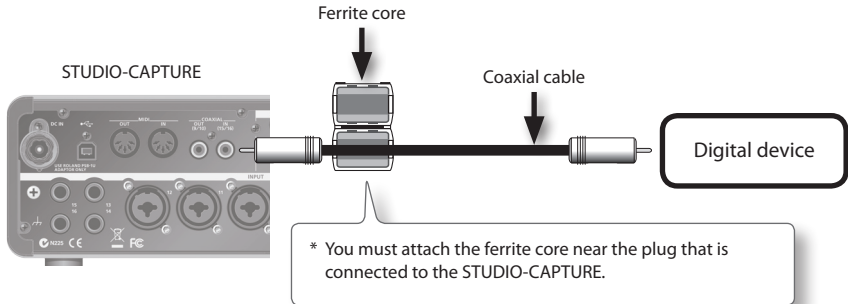

2. Press the halves together until they click shut.



- * Be careful not to pinch your fingers when attaching the ferrite core.
- * Do not damage the cable by pinching it excessively with the ferrite core.

MEMO

If the cable included with your digital device is thin, the attached ferrite core may slide along the cable. If so, use a band or adhesive tape to fasten the ferrite core in place. One such band is included.



To prevent accidental ingestion of the ferrite core and the band, always keep them out of the reach of small children.

Copyright © 2013 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

STUDIO-CAPTURE




フェライト・コアの取り付けかた

お使いになる前に必ずフェライト・コアを取り付けてください。

COAXIAL IN (15/16) 端子にデジタル機器をつなぐときは、付属のフェライト・コアを取り付けてください。

電磁ノイズ防止用ですので取り外さないでください。

1. フェライト・コアをコアキシャル・ケーブルに取り付けます。

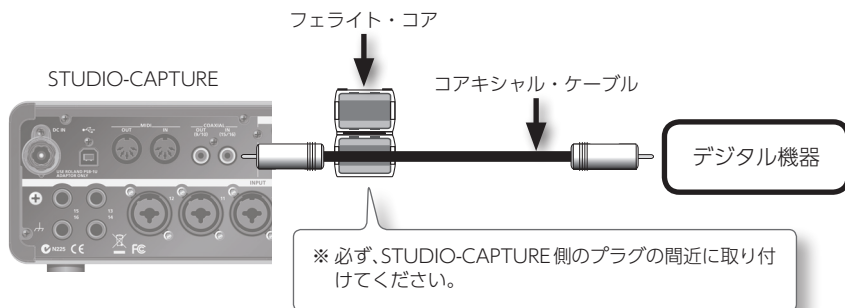

2. カチッと音がするまで押し込みます。



※ フェライト・コアを取り付けるとき、指などを挟まないようにご注意ください。

※ フェライト・コアを閉めるとき、ケーブルを無理に挟まないでください。

メモ

お使いのデジタル機器に付属のコアキシャル・ケーブルが細い場合、取り付けしたフェライト・コアが緩んで動いてしまうことがあります。このような場合は、バンドやテープなどで固定してください。固定用のバンドは 1 本付属しています。



フェライト・コアとバンドはお子様が悪戯で飲み込んだりすることのないよう手の届かないところへ保管してください。

© 2013 ローランド株式会社

本書の一部、もしくは全部を無断で複製・転載することを禁じます。

STUDIO-CAPTURE